Sensor Networking for Medical and Industrial Flat Panel Detectors




Pleora's comprehensive portfolio of sensor interface solutions help manufacturers reduce development costs, complexity, and time by providing a high-bandwidth, highly reliable end-to-end network link between flat panel detectors (FPDs) and receiving devices.


The company's real-time sensor networking expertise solves complex connectivity challenges for X-ray systems that must process, analyze, and display highbandwidth video and data with extremely low latency. Pleora's embedded hardware, highly flexible FPGA IP core, and softwareonly solutions seamlessly transmit sensor data from static and dynamic FPDs to software designed to efficiently receive high-bandwidth image streams.


Pleora's market-proven sensor interfaces for FPDs have been designed into medical radiography, panoramic dental, security, and industrial inspection applications.

Simplifying FPD Sensor Interface Design

- Transmit real-time, low latency sensor data over a secure 1, 2.5, 5, or 10 Gbps GigE link to receiving software or hardware
- Easily integrate small footprint hardware and "zero footprint" FPGA IP Core or software solutions into existing and new FPDs
- GigE Vision 2.0 compliance ensures interoperability in multi-vendor systems
- GenlCam compliant interfaces provide easy access to programming features and simplify integration of FPDs into existing or new systems
- Image management tags an image or group of images with metadata provides context necessary to retrieve image data from the on-board frame buffer, protecting valuable patient X-rays in event of power or network failure at the receiver
- IEEE 1588 Precision Time Protocol synchronize multiple FPDs to a network master clock with up to 1 μs (microsecond) precision

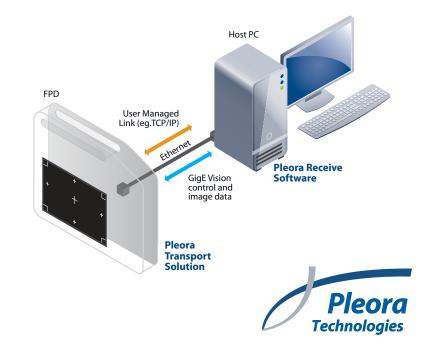

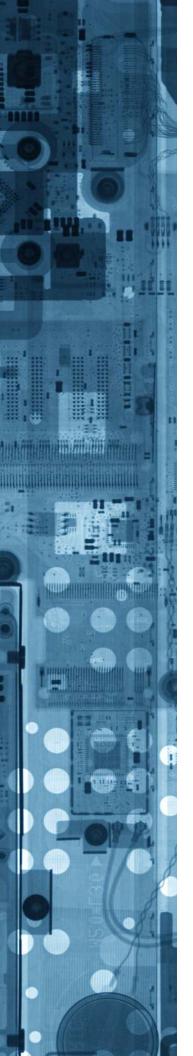

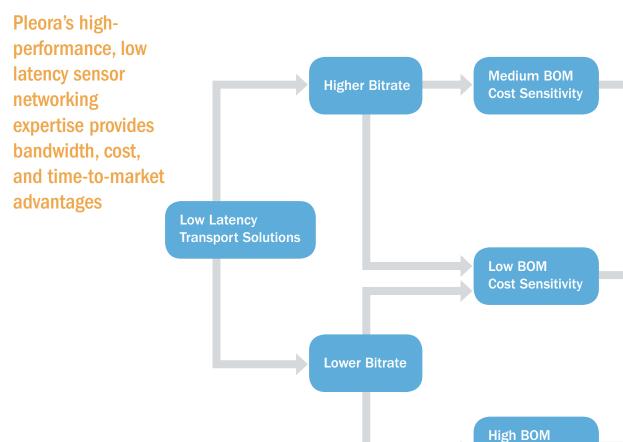

Product Line

Flexible, Zero Footprint, High-Bandwidth IP Core

CoreGEV-Tx10 GigE Vision FPGA IP Core

- 10 Gbps transmission of uncompressed images over Ethernet
- Generic AXI ports enable rapid connection to CPU system, memory system, MAC/PHY and sensor interface
- Flexible Hybrid Architecture reduces development time and risk by allowing designers to run full GigE Vision protocol from a software-only mode for rapid system level evaluation, implementation, and testing

Off-the-Shelf 1 Gbps Embedded Hardware

iPORT NTx-GigE



Cost Sensitivity

- Up to 32-bit, 120 MHz parallel LVTTL/ LVCMOS video input, and 4 interleaved taps
- 120 MB frame buffer to accommodate multi-mega pixel sensor sizes

iPORT NTx-Mini & Mini-S

- Up to 24-bit, 90 MHz parallel LVTTL/LVCMOS video input, and 2 interleaved taps
- · 32 MB frame buffer for store-and-forward applications
- Low profile Mini-S easily embedded in FPDs requiring a very low thickness form factor



FPGA IP Core

Flexible, zero footprint approach supporting 10 Gbps transmission

- Maximum design choice with full control over form factor and connector options
- Implement full GigE Vision connectivity into your existing FPGA with no additional components
- Application flexibility IP Core manages GigE Vision traffic while empowering end-user processor to fully own and manage the Ethernet link

Embedded Hardware

Compact drop-in sensor interface for new and retrofit design

- Reduce development costs and speed time-to-market by leveraging drop-in, standards-based technology for all transport requirements
- Simple pixel bus interface and serial ports for control and communication ensure easy integration into final system
- · Field-proven in medical and industrial FPD applications

Software Transmitter

Software implementation of a full device level GigE Vision transmitter

- Simple to implement stream sensor data from FPD without any additional hardware
- Highly tuned code for minimal CPU utilization impact and maximum transmit performance

High-Bandwidth Receive Software

eBUS Rx for Host Applications

eBUS Rx manages high-speed reception of images or data from FPDs into buffers for hand-off to the end application for further analysis. With eBUS SDK, developers can write applications that run on a host computer to seamlessly control and configure an unlimited number of GigE Vision and GenICam compliant FPDs.

Higher Bandwidth GigE Vision over NBASE-T Embedded Hardware

iPORT NTx-NBT25 & NTx-NBT50

- Supports 1/2.5/5 Gbps transmission of uncompressed images over standard Cat 5e Ethernet cabling for distances up to 100 meters
- Small footprint hardware easily integrated into existing and new imaging device designs



GigE Vision Software Transmitter

eBUS Tx Software Transmitter

Adding eBUS Tx to a FPD's software stack turns it into a fully compliant GigE Vision device that supports image transmission and enables the FPD to respond to control requests from a host controller. eBUS Tx is GigE Vision and GenICam compliant, meaning end-users can use any standardscompliant third-party image processing system.




From medical imaging to industrial inspection and security, Pleora's end-to-end sensor interface products are enabling design, usability, and cost advantages in X-ray FPD applications.

Medical Radiography

Develop high-performance panels that leverage networking and cost benefits of Ethernet


Pleora's embedded interfaces are based on a modular architecture that delivers video with high reliability and low consistent latency over GigE, GigE over NBASE-T and 10 GigE. This makes it fast and easy for manufacturers to create a family of FPDs with different interface options.

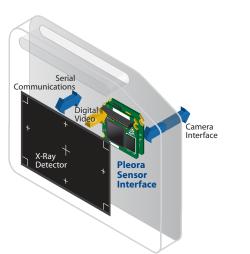

X-Ray Cargo Inspection

High-bandwidth, off-the-shelf interface solution for industrial FPDs


Pleora's embedded solutions help reduce design time and component costs of industrial FPDs. The interface solutions convert sensor data from FPDs into a high-bandwidth GigE Vision stream that is transferred with low, consistent latency to processing units and displays over an Ethernet connection.

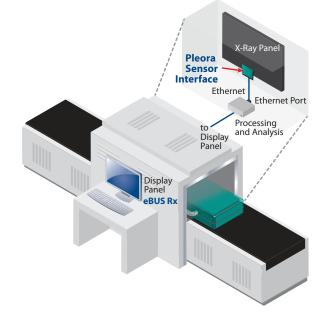

Panoramic Radiography

Simplify design FPDs for panoramic radiography and X-ray dental systems

Pleora's embedded interfaces help manufacturers of FPDs for panoramic dental systems quickly and easily integrate highperformance sensor connectivity into their products. Transmitting images, control data, and power over a single flexible Ethernet cable ensures reliable performance in the rotating imaging system while eliminating reliability and costs issues associated with slip rings.

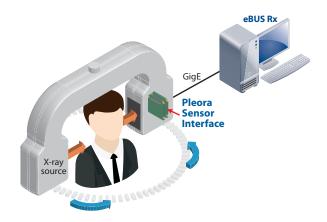

Pleora Technologies Inc. 340 Terry Fox Dr, Suite 300 Kanata, Ontario K2K 3A2 Tel: +1.613.270.0625 Fax: +1.613.270.1425 Email: info@pleora.com www.pleora.com © 2019 Pleora Technologies Inc. vDisplay, iPORT, and eBUS, are trademarks of Pleora Technologies Inc. Information in this document is provided in connection with Pleora Technologies products. No license, express or implied, by estoppels or otherwise, to any intellectual property rights is granted by this document. Pleora may make changes to specifications and product descriptions at any time, without notice. Other names and brands may be claimed as the property of others.